

Programmier-Geräte an BASCOM anschließen

STK500

Waveshare ATMEL AVR Programmer

Diamex USB - ISP -Stick AVR-Programmieradapter

Das Gerät muss nur per USB verbunden werden - den Rest macht Windows 10/11.

The screenshot shows the 'BASCOM-AVR Options' dialog box with the 'Programmer' tab selected. The 'Programmer' dropdown is set to 'STK500 native driver'. The 'Play sound' field is empty. The 'AutoVerify' checkbox is checked, while 'Erase warning', 'Auto Flash', 'Upload Code and Data', 'Program after compile', and 'Set focus to terminal emulator after programming' are unchecked. The 'Atmel' sub-tab is active, showing 'COM-port' as 'COM7', 'Clock' as '125000', 'Timeout USB' as '100', and 'Timeout Serial' as '100'. The 'Do not set ISP clock frequency', 'AVRISP protocol', and 'USB' checkboxes are unchecked. At the bottom are 'Default', 'Ok', and 'Cancel' buttons.

BASCOM-AVR Options

Compiler Communication Environment Simulator **Programmer** Monitor Printer

Programmer STK500 native driver

Play sound

☐ Erase warning ☐ Auto Flash ☒ AutoVerify ☐ Upload Code and Data
☐ Program after compile ☐ Set focus to terminal emulator after programming

Atmel

COM-port COM7 ☐ Do not set ISP clock frequency
Clock 125000 ☐ AVRISP protocol
Timeout USB 100 ☐ USB
Timeout Serial 100

Default ☒ Ok ☐ Cancel

From:

<https://wiki.modellbahn-anlage.de/> - Wiki der Modellbahn-Anlage.de

Permanent link:

<https://wiki.modellbahn-anlage.de/elektronik/bascom/bascom-programmier-geraete>

Last update: **07.05.2025 15:05**

